

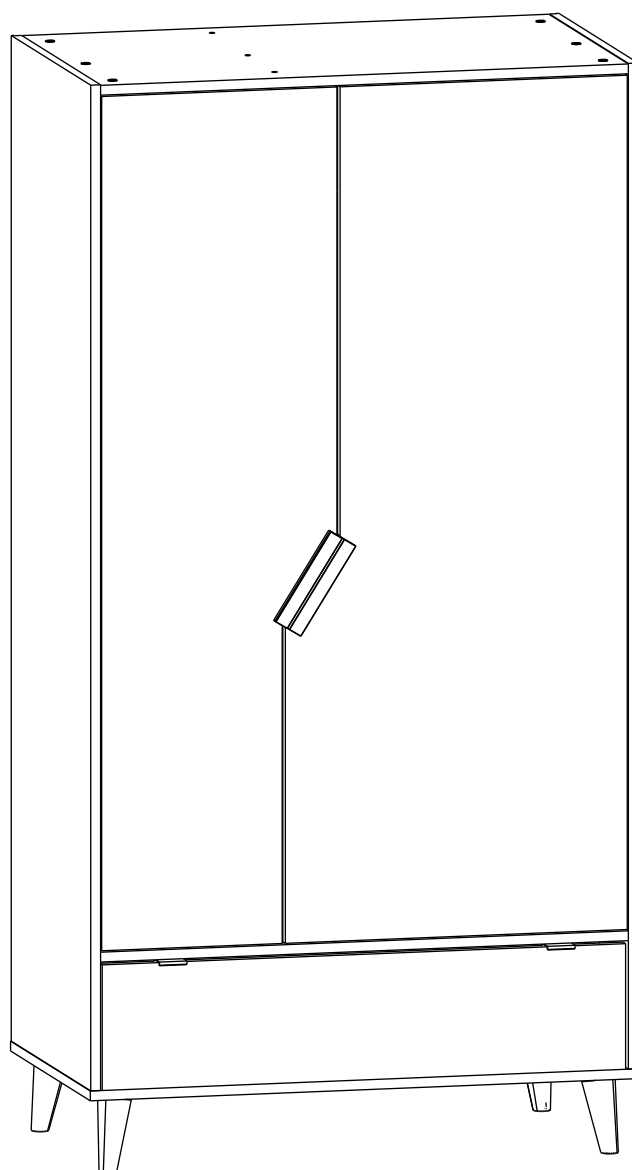











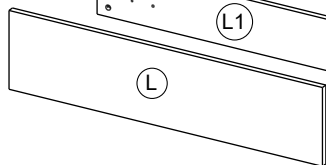
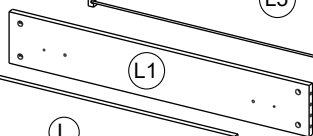
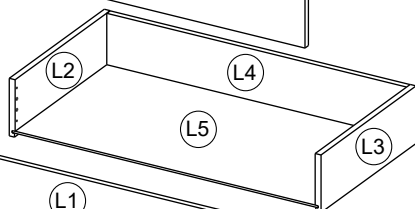
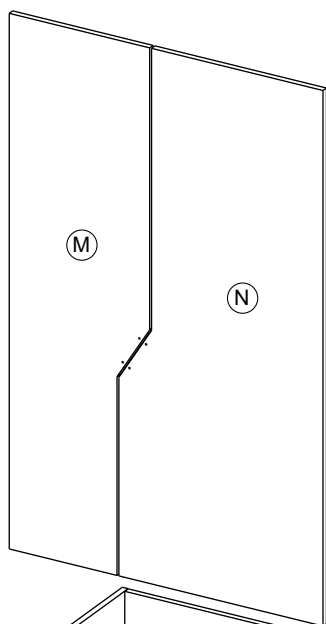
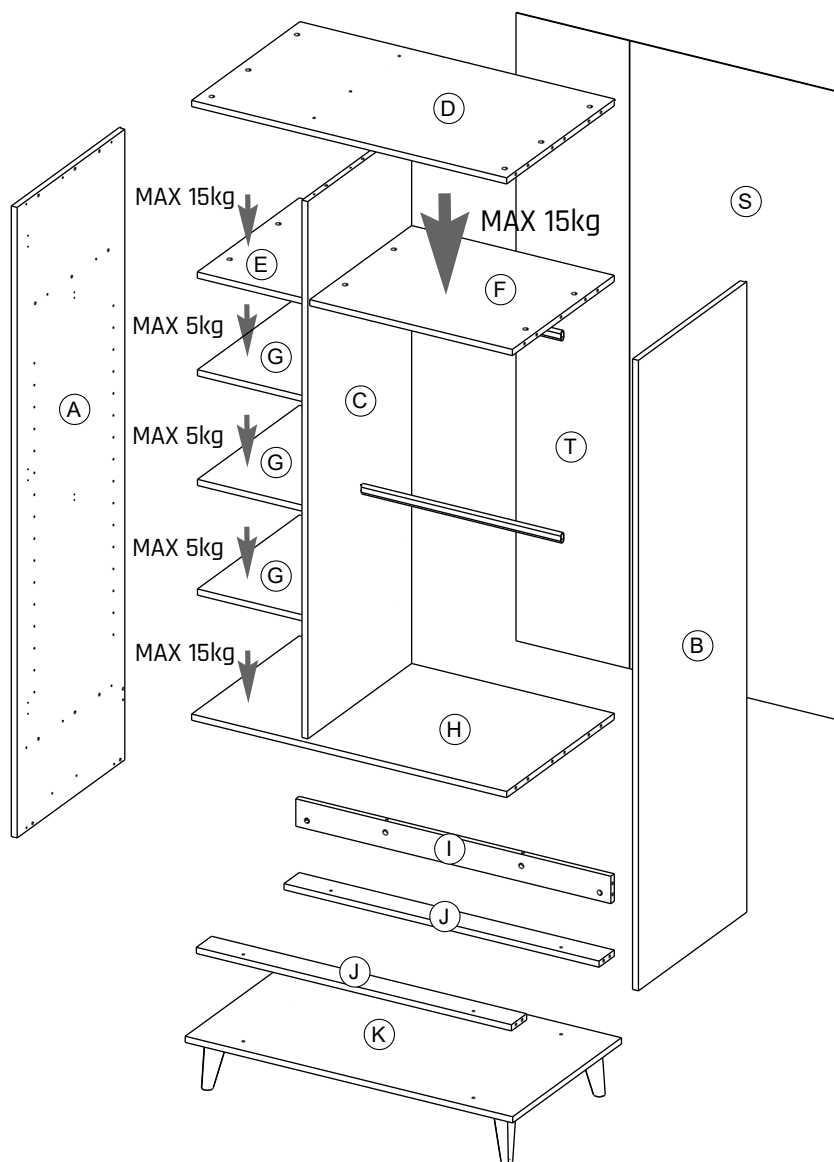







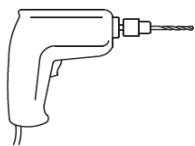


	A001  13 36x	A002  36x	A003  8x30 46x	A005  12x	A006  3,5x16 60x	A007  6x13 6x	A008  M6x30 4x	A009  3,5x16 20x
A010  3,0x20 7x	A011  6x	A014  L-611 2x	A015  6x	A018  8x	A020  7x50 14x	A025  L-500 1x	A031  #4 1x	
A036  2x	A039  M6x15 2x	A048  M4x25 4x	A052  L-50 2x	A053  4x	A057  4x16 16x	A058  4x	A059  3,5x30 2x	A060  2x



1

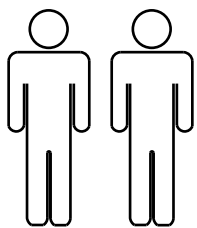


3

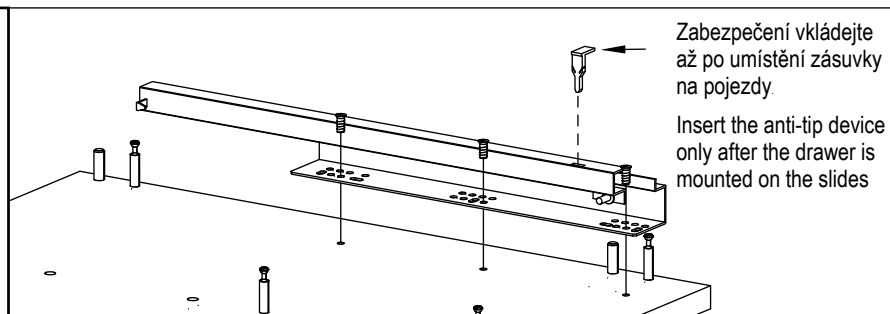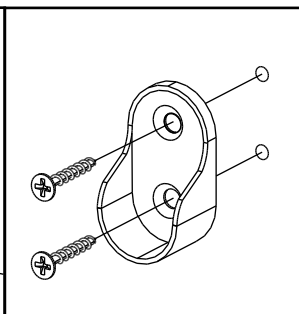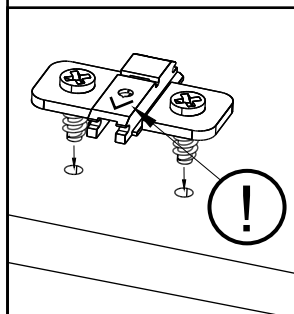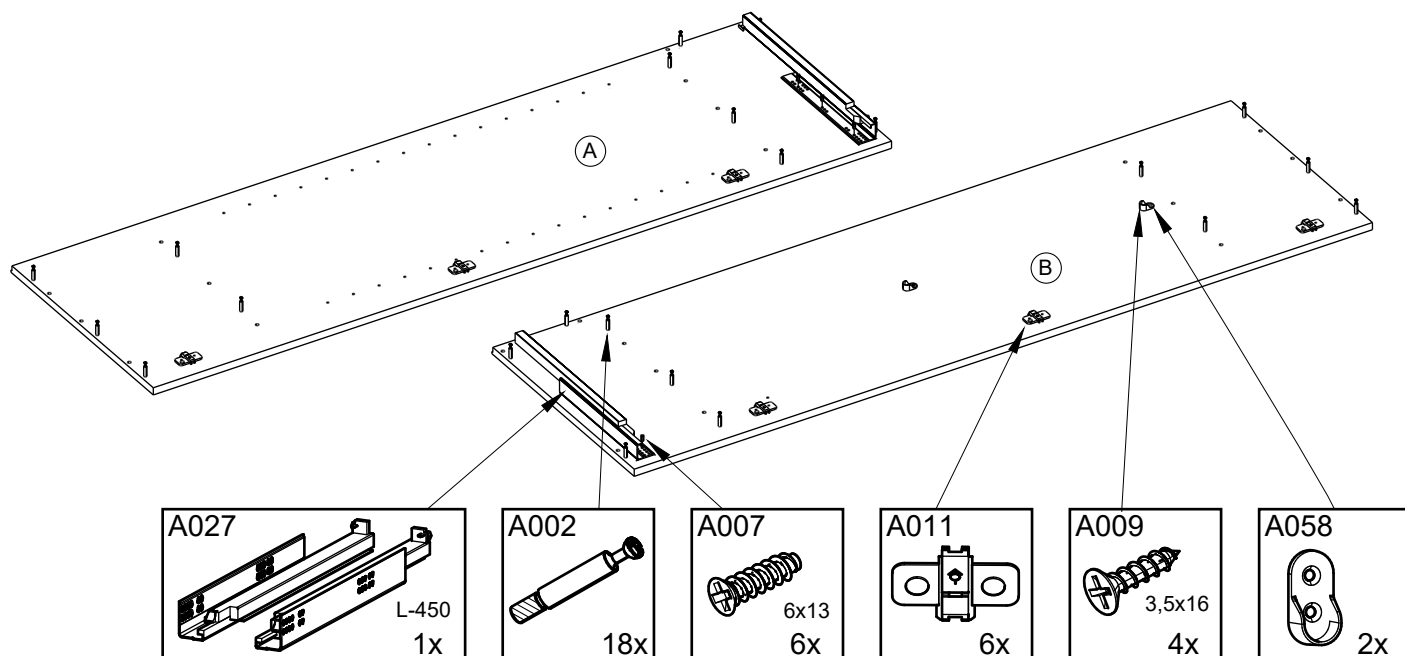


4

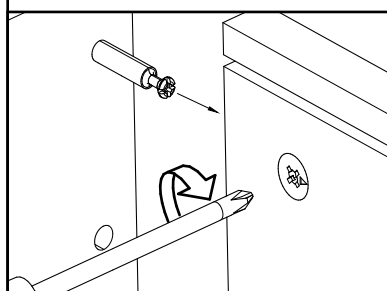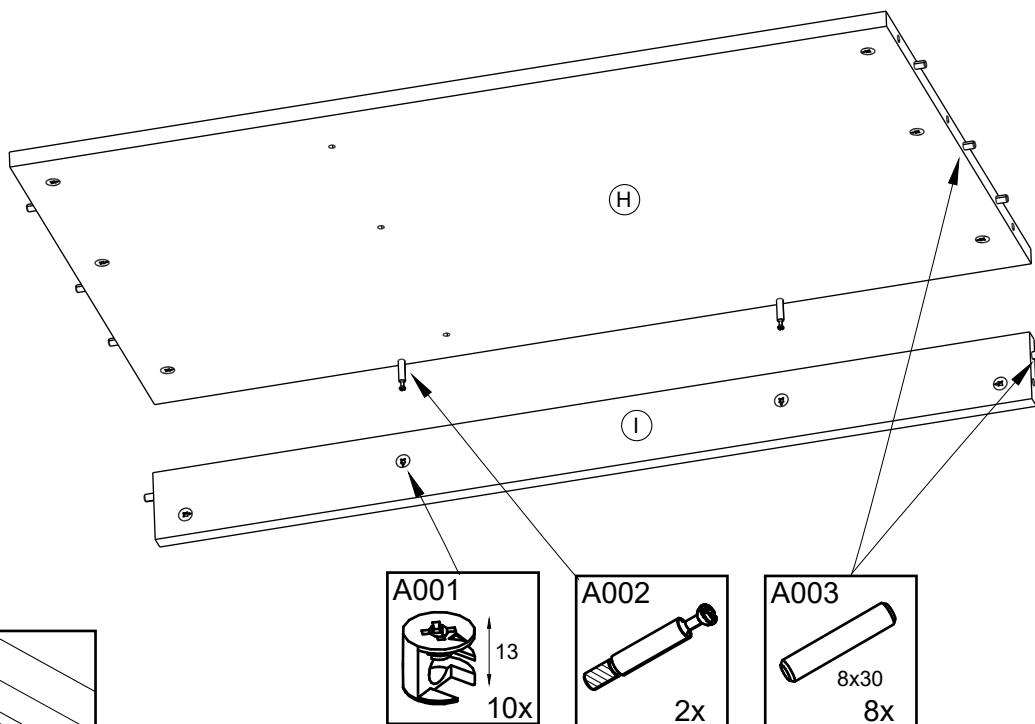


5

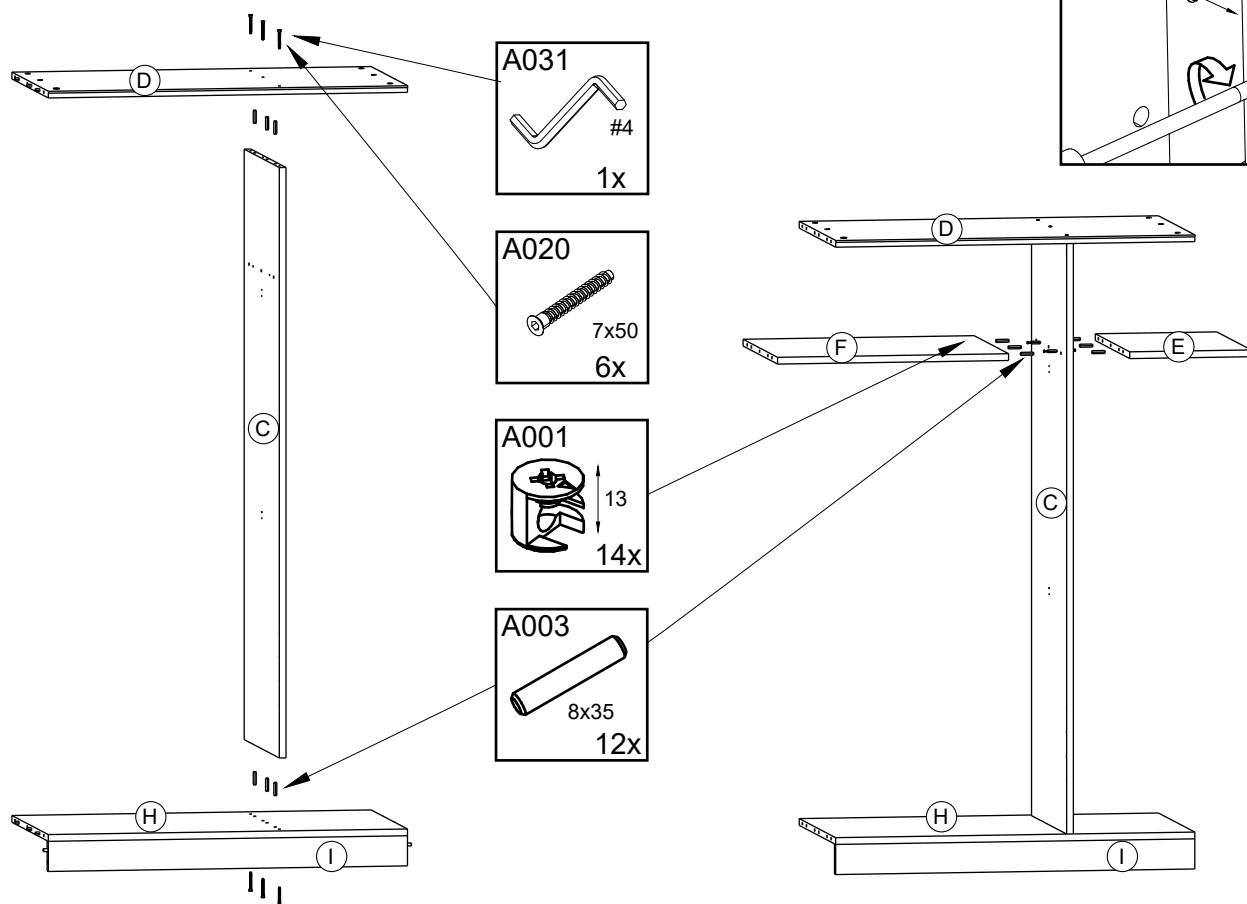


6

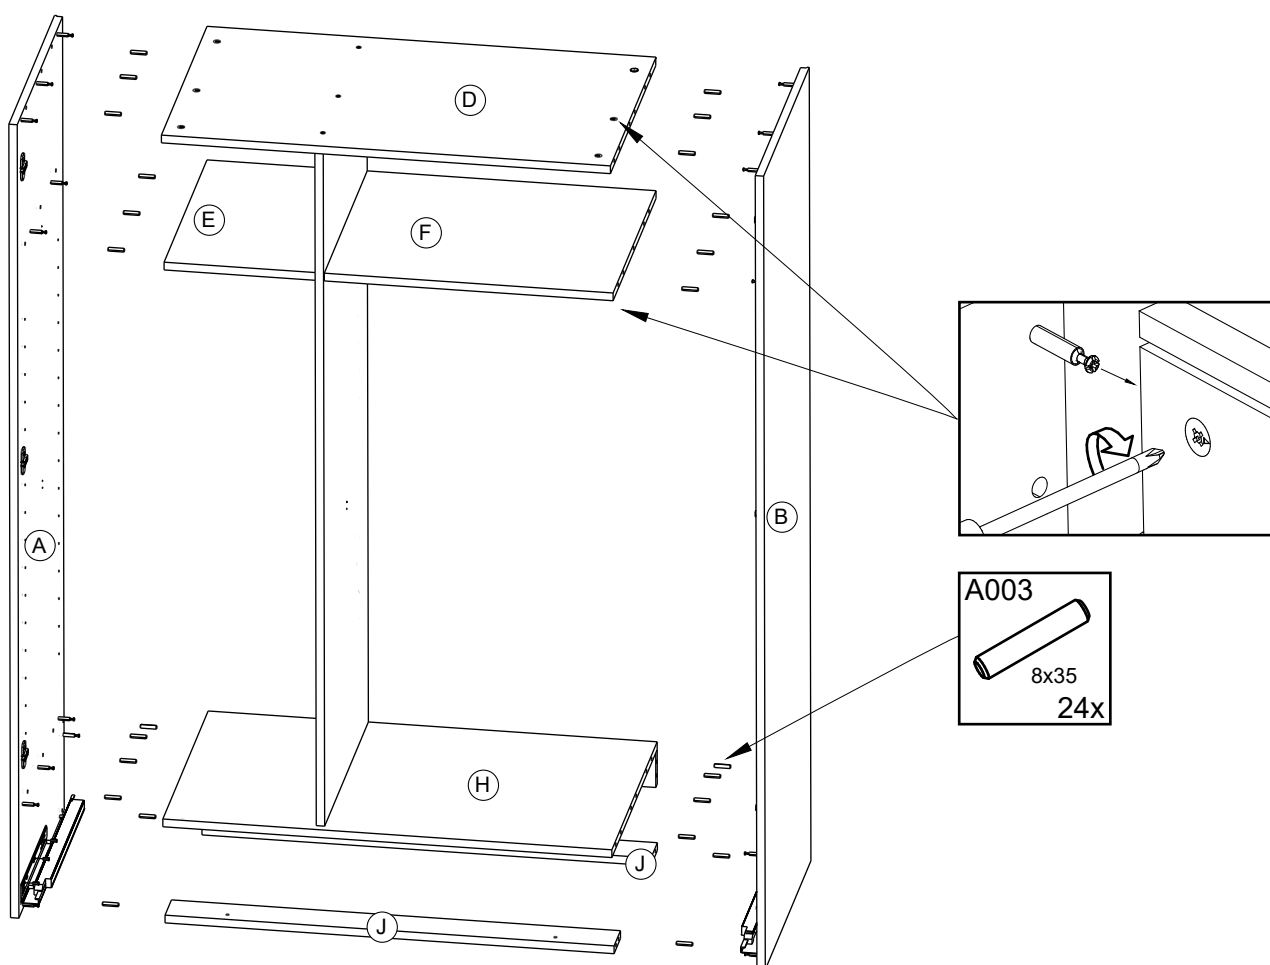







7

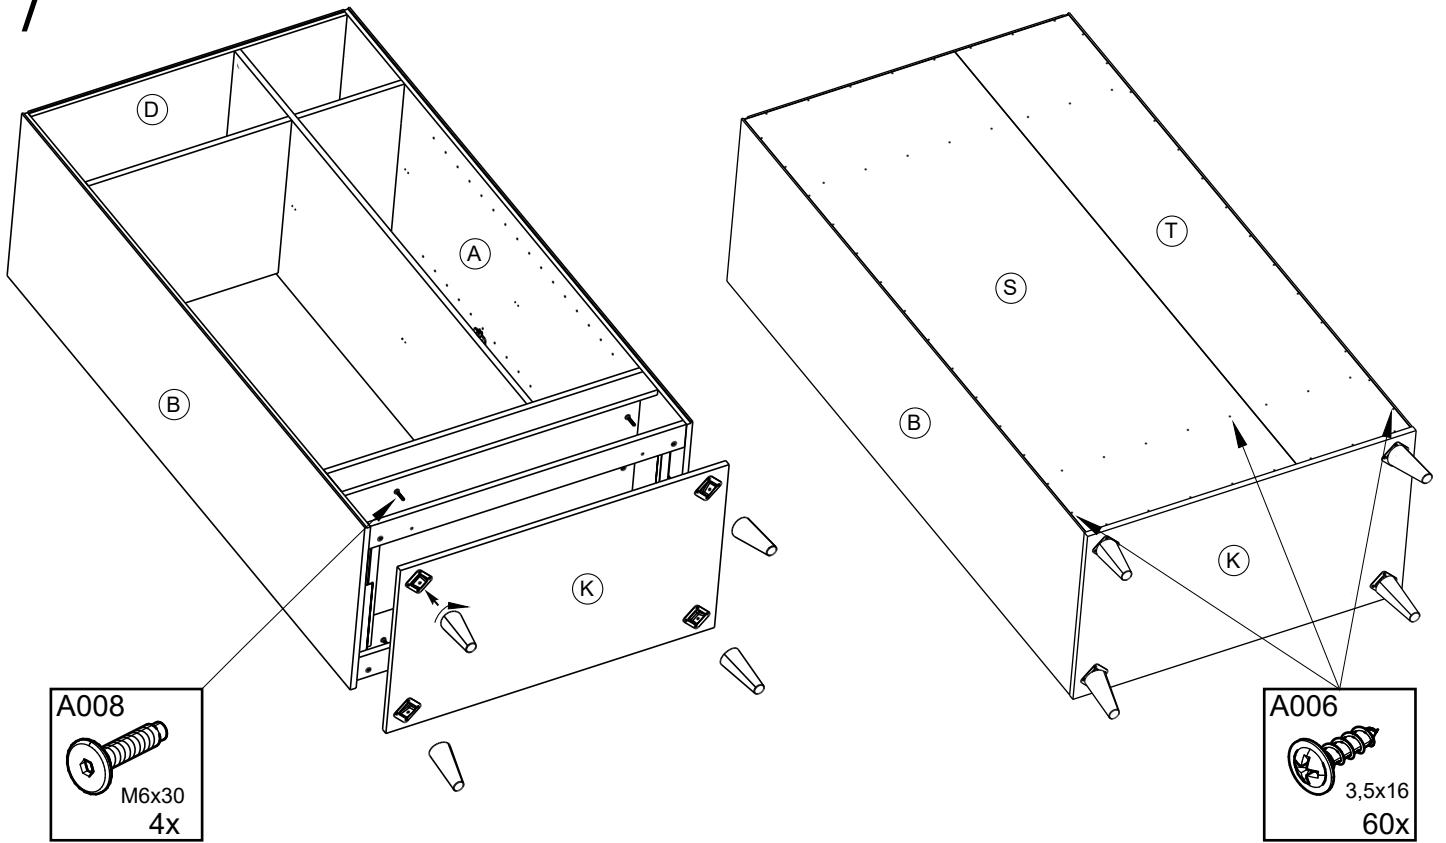

8

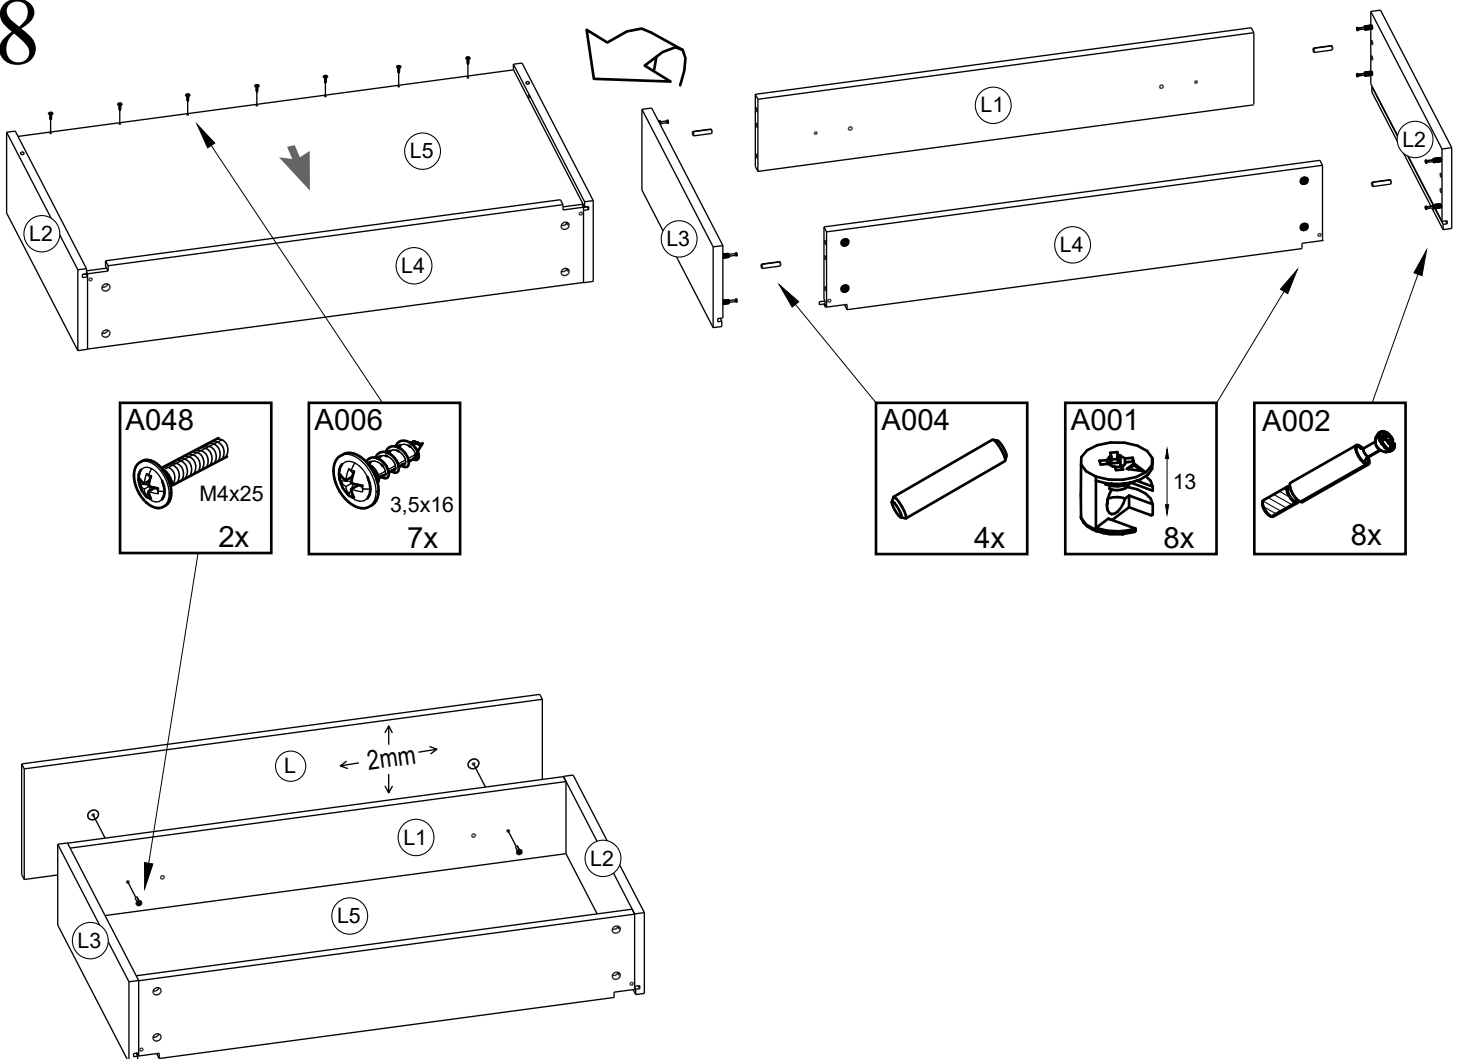

7

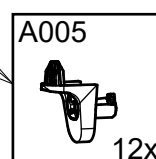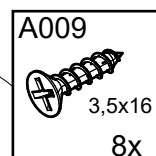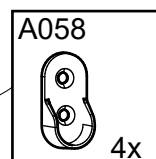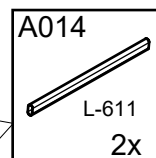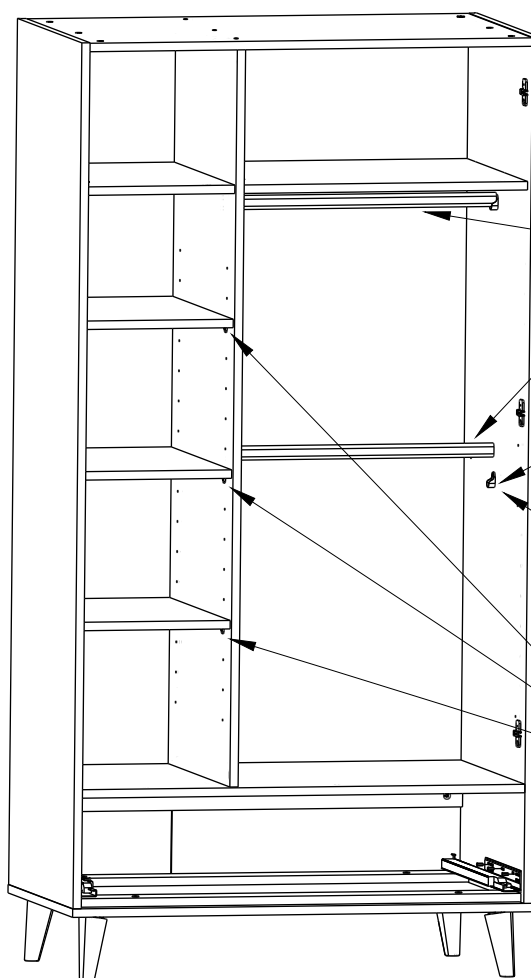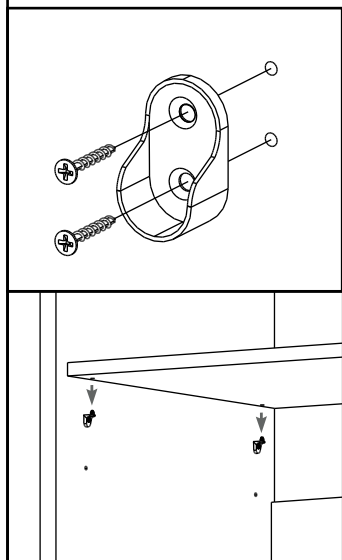

8

Přišroubování ke stěně zabrání převrácení nábytku.

Screwing to the wall prevents the furniture from possibly falling over.

